



EnCompass 868



Quick Setup Guide

PREPARATION

It is advisable to have the following items to hand:

- C-type battery (provided)
- USB adaptor (if mains power required)
- Sensors (required for data capture)
- C2i **Entranet** gateway/receiver (collects transmitted data and conveys to desired destination)
- Magnet (provided)

Before setting up your **EnCompass 868** ensure the **Entranet** gateway/receiver is installed successfully (see **Entranet** instructions) and set up to detect new nodes.

CONNECT TO THE **Entranet**

With the **EnCompass** in the desired location use the magnet provided to put the **EnCompass** into Learn Mode. This will enable the **EnCompass** and **Entranet** to communicate. The communication status can be verified at the host computer or by the LED on the front of the **EnCompass** as follows:

(4 second blink = no signal, fast blink = weak signal, constant light = good signal.)

NB/ Gateway static IP address: 192.168.1.130

CONNECT SENSORS

- Having located a position with a good signal, connect up the required inputs/outputs with reference to the wiring diagram overleaf.
- Finally secure the **EnCompass** in a fixed position.

FURTHER INFORMATION

For more detailed information, such as instructions on network construction, and for the latest versions of all documents visit www.c2iwireless.com/support

For technical support visit the above website or email support@c2iwireless.com

C2i is a brand of Utilivista Ltd. Utilivista reserves the right to revise this publication at any time and to make changes to its contents without any obligation to notify former or present users of such revisions or changes.