


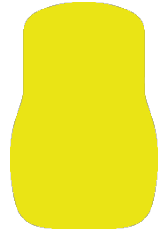

EnPower V



Quick Setup Guide

PREPARATION

It is advisable to have the following items to hand:

- SIM-card
- Power supply

Before setting up your C2i **EnPower** ensure access to the internet is available via Ethernet or 3G.

CONNECT TO THE INTERNET

With the **EnPower** in the desired location, power up the device and check the connection to the internet.

NB/ Gateway static IP address: 192.168.1.130

CONNECT POWER

- Having located a position with a good signal, safely connect the voltage.
- Finally secure the **EnPower** in a safe position and leave all temporary leads so as not to become a trip hazard.

SETUP THE **EnPower**

- Login to the web pages using the IP address 192.168.1.130.
- Using the setup guide go through each section.

FURTHER INFORMATION

For more detailed information, such as instructions on network construction, and for the latest versions of all documents visit www.c2iwireless.com/support

For technical support visit the above website or email support@c2iwireless.com

C2i is a brand of Utilivista Ltd. Utilivista reserves the right to revise this publication at any time and to make changes to its contents without any obligation to notify former or present users of such revisions or changes.