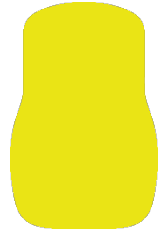# C2i

EnPower P

Quick Setup Guide

PREPARATION

It is advisable to have the following items to hand:

- SIM-card
- Power supply
- Current Transformers (if required)

Before setting up your C2i EnPower ensure access to the internet is available via TCP/IP or 3G.

CONNECT TO THE INTERNET

With the EnPower in the desired location, power up the device and check the connection to the internet.

NB/ Gateway static IP address: 192.168.1.130

CONNECT CURRENT TRANSFORMERS AND VOLTAGE

- Having located a position with a good signal, connect up the voltage and the Current Transformers using the plugs provided.
- Finally secure the EnPower in a safe position and leave all temporary leads so as not to become a trip hazard.

SETUP THE EnPower

- Login to the web pages using the IP address 192.168.1.130.
- Using the setup guide go through each section.

FURTHER INFORMATION

For more detailed information, such as instructions on network construction, and for the latest versions of all documents visit **www.c2iwireless.com/support**

For technical support visit the above website or email **support@c2iwireless.com**